



CASHMANS HORSE EQUIPMENT



**CASHMANS ELITE
FENCING SYSTEM**


TABLE OF CONTENTS

PLANNING	3
SKETCH MAP	
TOOLS REQUIRED	
FENCING CALCULATOR	
CORNER & END POSTS	7
REQUIREMENTS & INSTALLATION	
BRACING	8
REQUIREMENTS	
INSTALLATION	
INSULATORS	10
REQUIREMENTS & INSTALLATION	
INSTALLATION IN TREES	
LINE POSTS	12
REQUIREMENTS & INSTALLATION	
BRAID INSTALLATION	13
REQUIREMENTS & INSTALLATION	
ELECTRIFICATION	16
REQUIREMENTS & INSTALLATION	

PLANNING

Drafting a Sketch

- Mark major features such as buildings, roads, fields, woods, gullies, and streams as well as power, telephone, gas and oil lines, and underground cables.
- Mark the location of each end and corner post.
- Mark the location of each line post based on the your desired distance between line posts
- Mark the location of the energizer (close to outlet for plug in unit near a fence for solar power unit)
- Calculate the total length of your fence
- Choose the number of strands of Cashman Elite you wish to use. We recommend 4 or 5 stands.
- Choose the type of line post you wish to use (wood or T-posts)

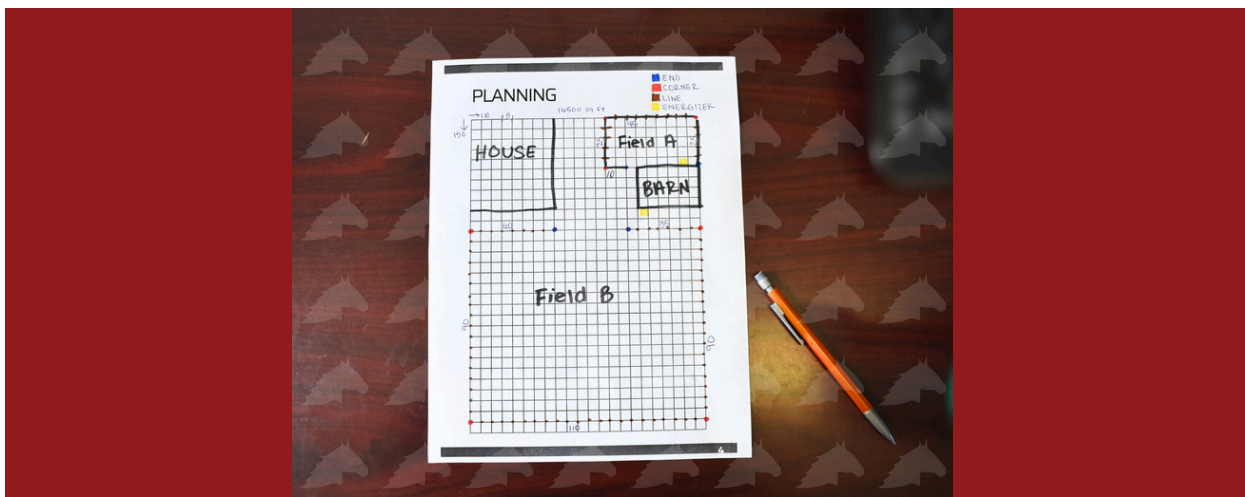

PLANNING


Marking the Ground

- If possible, mow the area where the fence will be installed.
- Use spray paint and stakes to mark all gate openings, end, and corner bracing assembly locations.
- Use string to pull your fence line.
- Use spray paint to mark additional secondary bracing assembly and line post locations.



**Scan QR Code with Phone Camera
for How to Measure Your Field
Using Google Maps Video**

PLANNING

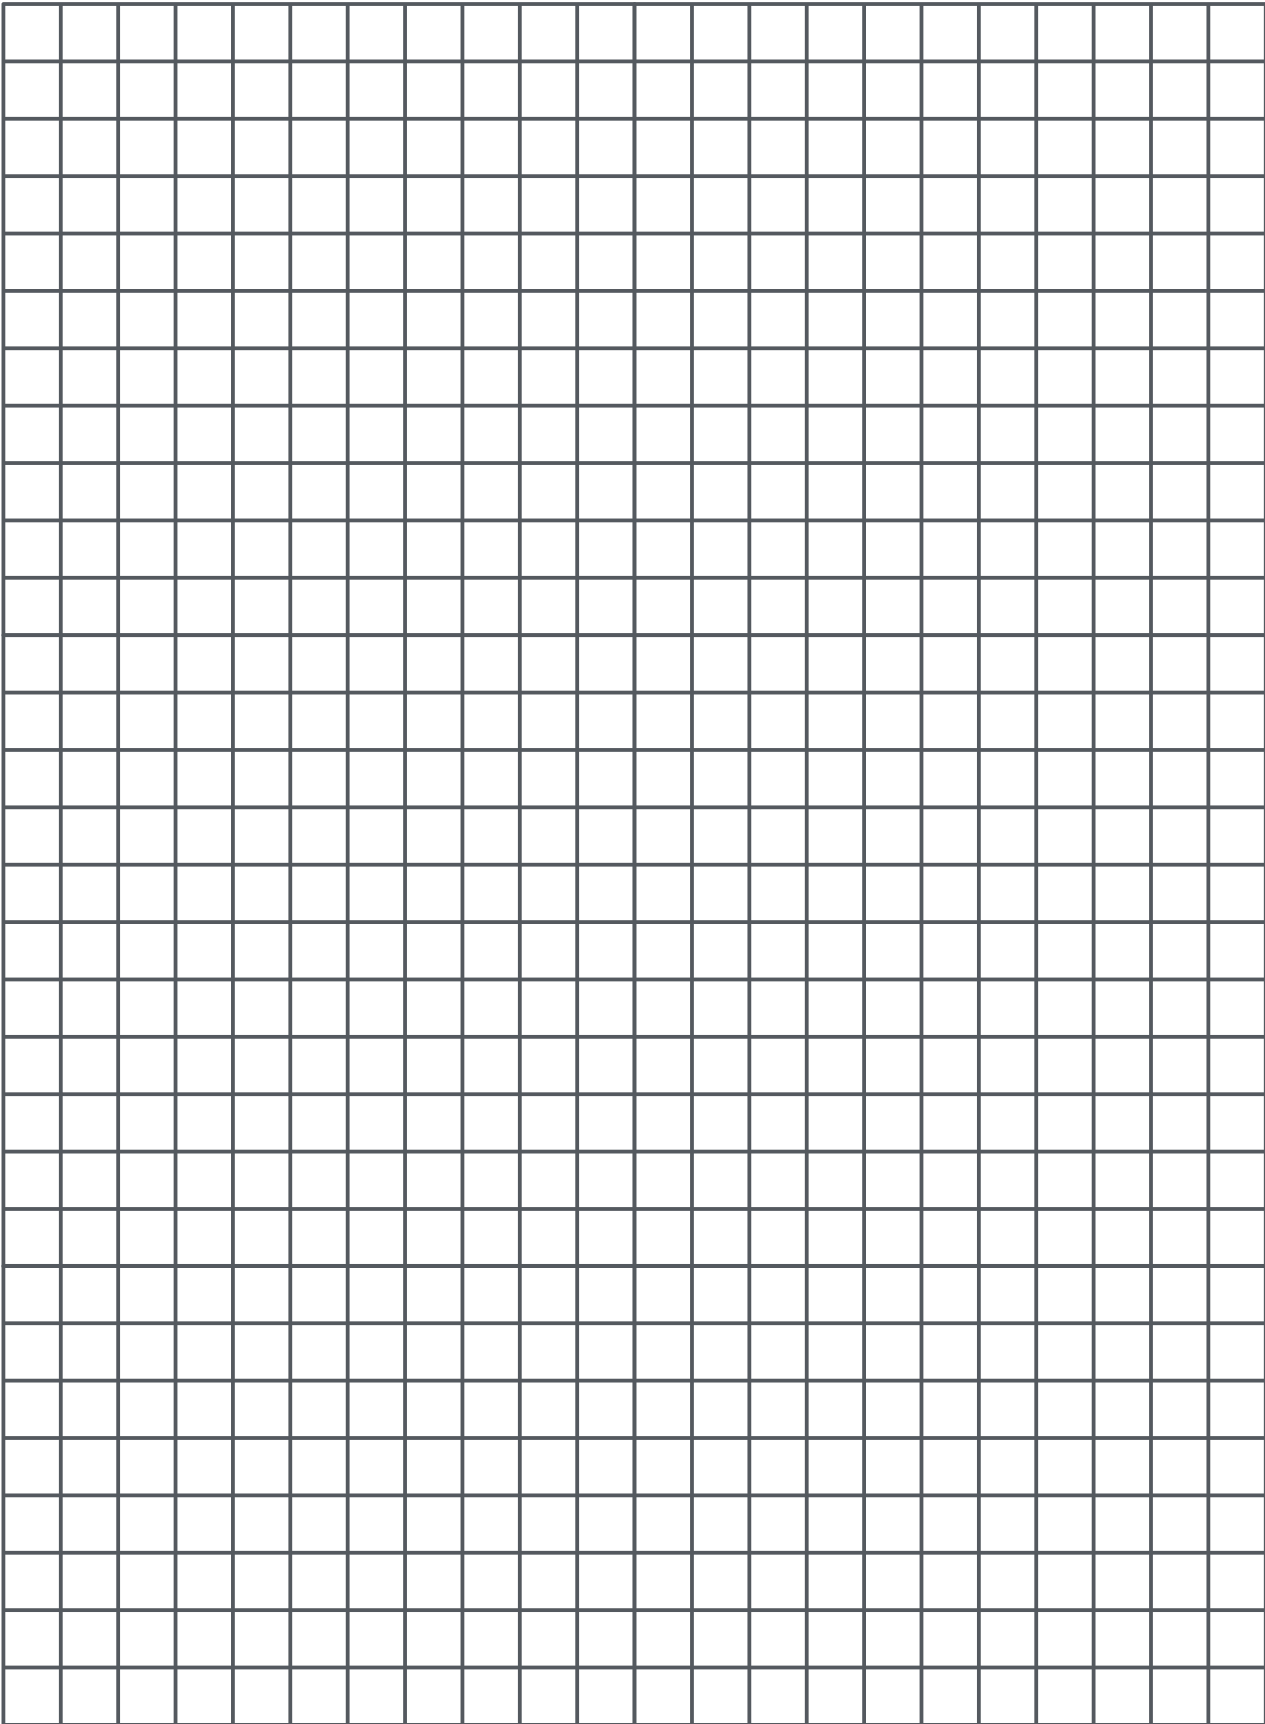

Fencing Calculator

Looking to replace your old fencing or put in new fencing?

Answer these 5 simple questions for a Cashman Elite Fencing estimate.

**Includes rolls of fencing, line post insulators, corner roller insulators and copper split bolts.*

Perimeter of pasture (feet) A 500 x 500 field would be 2000 feet Enter the perimeter of the pasture. A 500 x 500 field would be 2000 feet.

of Braided Strands (1-6) enter the number of braided lines that make up the fence from top to bottom

of Gates: A gate has a Start and a Stop on each side made up of 2 supported posts

of Feet between posts: Posts for elite Fence can be up to 50 feet apart.

of Corners A corner requires supported posts and other material.

Please click "NEXT" to send your estimated request to Cashmans to have someone follow up with you on your fencing needs.

Cashman Elite Fence Estimator **\$0.00** **NEXT**

www.cashmans.com/fencing-calculator/

PLANNING

Tools Required:

- Tensioning Kit(s) for Cashman Elite Rope
- Handheld Post Pounder (if using T-Posts)
- Black Electrical Tape
- Utility Knife
- Two Ratchet Handles with Sockets (9/16th" & 1/2")
- Safety Glasses
- Hammer
- Spade or Shovel
- Measuring Tape
- Lighter
- Adjustable Wrench

**Scan QR Code
with Phone
Camera for
Fencing
Calculator**




POST REQUIREMENTS AND INSTALLATION

We recommend purchasing Southern Yellow Pine pressure treated wood at least 5" in diameter

Installation

- Corner posts should be 6" in diameter and must be installed at least 4 feet in the ground
 - We recommend pounded posts rather than drilled
 - If drilling post holes, it is recommended to back fill with crushed limestone
- Call before you dig! Hitting any underground lines on your property could lead to disaster!
- Install and brace all corner posts before installing the line posts because the first connecting Cashman Elite strand will serve as a guide

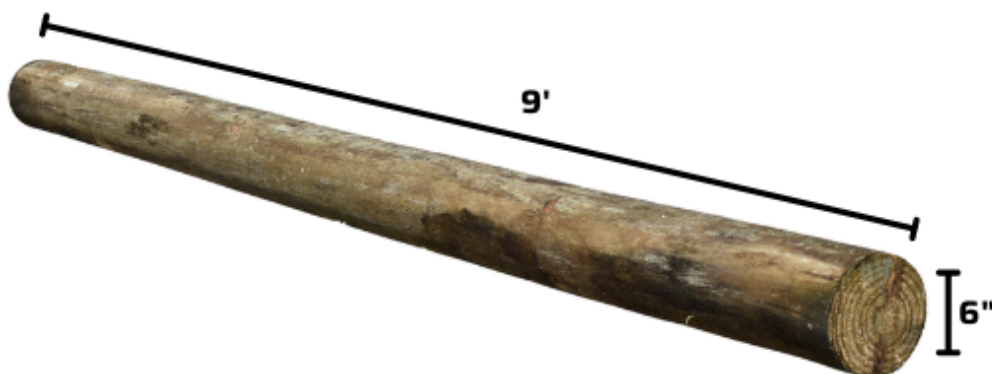

BRACING REQUIREMENTS

What requires brace posts?

Corners:

- Greater than 20 degree angles are considered corners and should be braced in both directions

Ends:

- Start/stop fencing
 - Gateways
 - Cross fencing
 - Side of buildings



In-Line:

- To maintain tension, install a bracing system every 2000 ft

Please Note:

- **Proper bracing will help account for the post shifting and reduce maintenance**
- **Improper and insufficient bracing can lead to failure**

BRACING INSTALLATION

H-Brace (Horizontal Brace)

- Mark the middle space between the desired placement of the top two strands of Cashman Elite
- Set your horizontal rail there and drive a brace pin through the predrilled hole of the post
 - Measure and pre-drill hole for ease
 - The brace pin should protrude by 1/2" to hold the brace wire
- Wrap the brace wire around the top of the brace post and connect it to the bottom of the end post
- Tension the brace wire with a tensioning stick, ratchet strainer, or a gripple (set a nail so that the wire will not slide up)

Please Note:

- **The brace wire cannot touch any Cashman Elite strands or else it could lead to an electrical short**



INSULATOR REQUIREMENTS & INSTALLATION

- Measure and mark the location of each planned strand of Cashman Elite
 - It is suggested to create a jig for quicker measurements (stick with correct length for repeated marking)
- Attach roller insulators using 2 ½” rust resistant screws
 - **Do not over tighten** as it can break the bracket!

Please Note:

- **All posts must have insulators as wood is a conductive material**




**Scan QR Code with
Phone Camera for
Choosing Your Line
Post Insulator
YouTube Video**



INSULATOR INSTALLATION IN TREES

Insulators can be applied to trees in a wooded area!

- The mature tree must be at least 8" in diameter
- Avoid small trees as movement can wear down the Cashman Elite strands
- Remove and maintain any brush that might come into contact with the fence
- Attach a 2x4 to the tree and then apply the insulators to the 2x4 (prevents tree growth on top of the insulator)

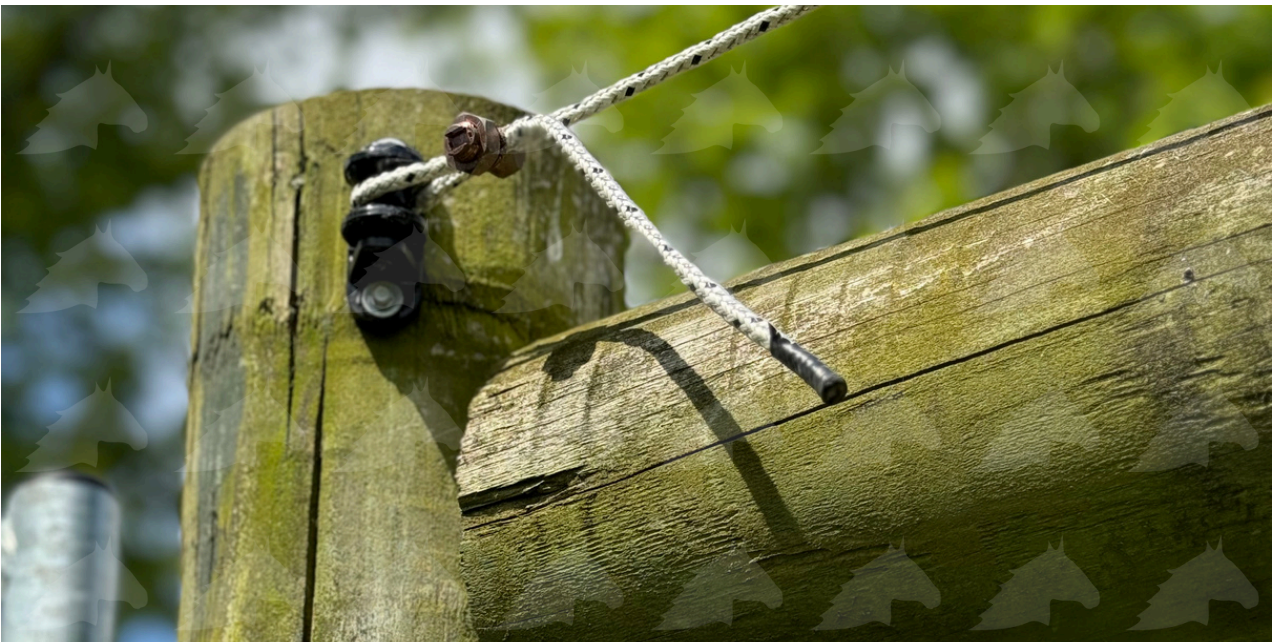

LINE POST INSTALLATION

- To gain a guide, secure a line of Cashmans Elite between two corner posts and mark the placement of each line post
 - Repeat the same steps as the corner post installation, applying the insulators while noting which side the strand will run through
 - On hilly terrain, install line posts at the peaks and in the valleys first, spacing the remaining posts evenly between them
 - Posts can be spaced up to 50 feet in larger, flat pastures

Please Note: When installing line posts with T-Posts, place the flat side inwards to allow the braids to run on the inside of the paddock



BRAID INSTALLATION

Feeding the line:

- Starting at a roller insulator, wrap the Cashman Elite strand through and around the roller
- Secure the rope to itself with a copper split bolt
- The copper bolt should be 2" from the roller insulator and have 4" of tail space
- Cut, tape and singe the ends with a lighter to prevent fraying
- Run the rope through the line post insulators down your fence line (see page 15 for instructions of opening roller insulators)
- When you get to a corner post, run the Cashman Elite strand through the roller insulators on the back side of the post
- Continue down the fence line and terminate at your end post using the tensioning instructions on page 15

Scan QR Code with Phone Camera for Installing the Cashman Elite Strands YouTube Video



BRAID INSTALLATION

When to use the copper split bolt:

- Used for starting and stopping
- Used for splicing
- Used for running/connecting lead out wire from the fence charger to the rope

How to use copper split bolt:

- Wrap copper split bolt around both strands with the larger bolt resting on the tail end
- Use ratchets to secure bolts into place



**Scan QR Code with
Phone Camera for How
to Splice Cashman Elite
Fencing YouTube Video**



BRAID INSTALLATION

Opening the insulator:

- Using a utility knife, pull the pin cap out of the bottom of the insulator
- Grab the pin from the top and remove the roller
- Place the line inside the insulator brackets and reinsert the roller
- Replace the pin and make sure it is secure

Tensioning the Line:

- Place the tensioning kit on the braided strand, around 2ft from the end post
- Wrap the ratchet rope around the end post, using the carabiner to fasten
 - Hook the tensioning clamp onto the tensioning device and use the ratchet to tighten it
 - Only use the amount of force that your body can create as using more could snap the rope
- Once tightened, place another cooper split bolt on the end post and secure as done before
- Detach the tensioning kit

**Scan QR Code with Phone Camera
for Tightening the Strands YouTube
Video**



ELECTRIFICATION REQUIREMENTS

Power System Type

- Plug-in unit (near an outlet)
- Solar Power unit (near a fence)

Size of charger needed

- Joule Output = 1 joule per mile for fencing multiplied by the number of electrified Cashman Elite strands

Every charge requires 3 ground rods of six foot in length or longer

- Recommended 10 ft apart from each other
- Needs to be able to tap into the water table for moisture

Copper Lead Out Wire

- Wire running from barn/stable to fencing via underground
- Used to jump strands and gates

THANK YOU

CASHMANS HORSE EQUIPMENT

(740) 363 - 6073

www.cashmans.com

info@cashmans.com

1646 US-42 N, Delaware, OH, 43015

